

RAW file format - Supported Cameras in XF v4.0

Apple

QuickTake 100 / QuickTake 150

AVT

F-080C / F-145C / F-201C / F-510C / F-810C

Canon

PowerShot 600 / PowerShot A5 / PowerShot A50 / PowerShot A610 (CHDK hack) / PowerShot A620 (CHDK hack) / PowerShot A630 (CHDK hack) / PowerShot A640 (CHDK hack) / PowerShot A710 IS (CHDK hack) / PowerShot A720 IS (CHDK hack) / PowerShot Pro70 / PowerShot Pro90 IS / PowerShot G1 / PowerShot G2 / PowerShot G3 / PowerShot G5 / PowerShot G6 / PowerShot G7 (CHDK hack) / PowerShot G9 / PowerShot S2 IS (CHDK hack) / PowerShot S3 IS (CHDK hack) / PowerShot S5 IS (CHDK hack) / PowerShot S30 / PowerShot S40 / PowerShot S45 / PowerShot S50 / PowerShot S60 / PowerShot S70 / PowerShot Pro1 / EOS D30 / EOS D60 / EOS 5D / EOS 10D / EOS 20D / EOS 30D / EOS 40D / EOS 300D / Digital Rebel / Kiss Digital / EOS 350D / Digital Rebel XT / Kiss Digital N / EOS 400D / Digital Rebel XTi / Kiss Digital X / EOS D2000C / EOS-1D / EOS-1DS / EOS-1D Mark II / EOS-1D Mark III / EOS-1D Mark II N / EOS-1Ds Mark II / EOS-1Ds Mark III

Casio

QV-2000UX / QV-3000EX / QV-3500EX / QV-4000 / QV-5700 / QV-R41 / QV-R51 / QV-R61 / EX-S100 / EX-Z4 / EX-Z50 / EX-Z55 / Exlim Pro 505 / Exlim Pro 600 / Exlim Pro 700

Contax

N Digital

Creative

PC-CAM 600

Epson

R-D1

Foculus

531C

Fuji

FinePix E550 / FinePix E900 / FinePix F700 / FinePix F710 / FinePix F800 / FinePix F810 / FinePix S2Pro / FinePix S3Pro / FinePix S5Pro / FinePix S20Pro / FinePix S5000 / FinePix S5100/S5500 / FinePix S5200/S5600 / FinePix S6000fd / FinePix S7000 / FinePix S9000/S9500 / FinePix S9100/S9600

Hasselblad

CFV / H3D

Imacon

lpress 16-megapixel / lpress 22-megapixel / lpress 39-megapixel

ISG

ISG 2020x1520

Kodak

DC20 / DC25 / DC40 / DC50 / DC120 / DCS200 / DCS315C / DCS330C / DCS420 / DCS460 / DCS460A / DCS520C / DCS560C / DCS620C / DCS620X / DCS660C / DCS660M / DCS720X / DCS760C / DCS760M / EOSDCS1 / EOSDCS3B / NC2000F / ProBack / PB645C / PB645H / PB645M / DCS Pro 14n / DCS Pro 14nx / DCS Pro SLR/c / DCS Pro SLR/n / C330 / P850 / P880 / KAI-0340

Konica

KD-400Z / KD-510Z

Leaf

Aptus 17 / Aptus 22 / Aptus 54S / Aptus 65 / Aptus 75 / Aptus 75S / Cantare / CatchLight / CMost / DCB2 / Valeo 6 / Valeo 11 / Valeo 17 / Valeo 22 / Volare

Leica

Digilux 2 / Digilux 3 / D-LUX2 / D-LUX3 / V-LUX1

Logitech

Fotoman Pixtura

Mamiya

ZD

Micron

2010

Minolta

RD175 / DiIMAGE 5 / DiIMAGE 7 / DiIMAGE 7i / DiIMAGE 7Hi / DiIMAGE A1 / DiIMAGE A2 / DiIMAGE A200 / DiIMAGE G400 / DiIMAGE G500 / DiIMAGE G530 / DiIMAGE G600 / DiIMAGE Z2 / Alpha/Dynax/Maxxum 5D / Alpha/Dynax/Maxxum 7D

Nikon

D1 / D1H / D1X / D2H / D2Hs / D2X / D2Xs / D3 / D40 / D40X / D50 / D70 / D70s / D80 / D100 / D200 / D300 / E700 ("DIAG RAW" hack) / E800 ("DIAG RAW" hack) / E880 ("DIAG RAW" hack) / E900 ("DIAG RAW" hack) / E950 ("DIAG RAW" hack) / E990 ("DIAG RAW" hack) / E995 ("DIAG RAW" hack) / E2100 ("DIAG RAW" hack) / E2500 ("DIAG RAW" hack) / E3200 ("DIAG RAW" hack) / E3700 ("DIAG RAW" hack) / E4300 ("DIAG RAW" hack) / E4500 ("DIAG RAW" hack) / E5000 / E5400 / E5700 / E8400 / E8700 / E8800 / Coolpix S6 ("DIAG RAW" hack)

Olympus

C3030Z / C5050Z / C5060WZ / C7070WZ / C70Z-C7000Z / C740UZ / C770UZ / C8080WZ / E-1 / E-3 / E-10 / E-20 / E-300 / E-330 / E-400 / E-410 / E-500 / E-510 / SP310 / SP320 / SP350 / SP500UZ / SP510UZ / SP550UZ / SP560UZ

Panasonic

DMC-FZ8 / DMC-FZ18 / DMC-FZ30 / DMC-FZ50 / DMC-L1 / DMC-L10 / DMC-LC1 / DMC-LX1 / DMC-LX2

Pentax

*ist D / *ist DL / *ist DL2 / *ist DS / *ist DS2 / K10D / K100D / K100D / Super Optio S / Optio S4 / Optio 33WR / Optio 750Z

Phase One

LightPhase / H 10 / H 20 / H 25 / P 20 / P 25 / P 30 / P 45

Pixelink

A782

Polaroid

x530

Rollei

d530flex

RoverShot

3320af

Samsung

GX-1S / GX-10

Sane

STV680 VGA

Sarnoff

4096x5440

Sigma

SD9 / SD10 / SD14

Sinar

3072x2048 / 4080x4080 / 4080x5440 / STI format

SMaL

Ultra-Pocket 3 / Ultra-Pocket 4 / Ultra-Pocket 5

Sony

DSC-F828 / DSC-R1 / DSC-V3 / DSLR-A100 / DSLR-A200 / DSLR-A700 / XCD-SX910CR